


# HARBOUR DOOR

III HARBOUR GATE 25 YEARS OF SERIOUS SERVICE

P 250.383.1606 F 250.383.2491 E [harbourdoor@shaw.ca](mailto:harbourdoor@shaw.ca)  
210 Mary Street, Victoria, BC, V9A3V9

[harbourdoor.com](http://harbourdoor.com)

## Pre-Wiring Procedure and Necessary Backing for Residential Jackshaft Operator

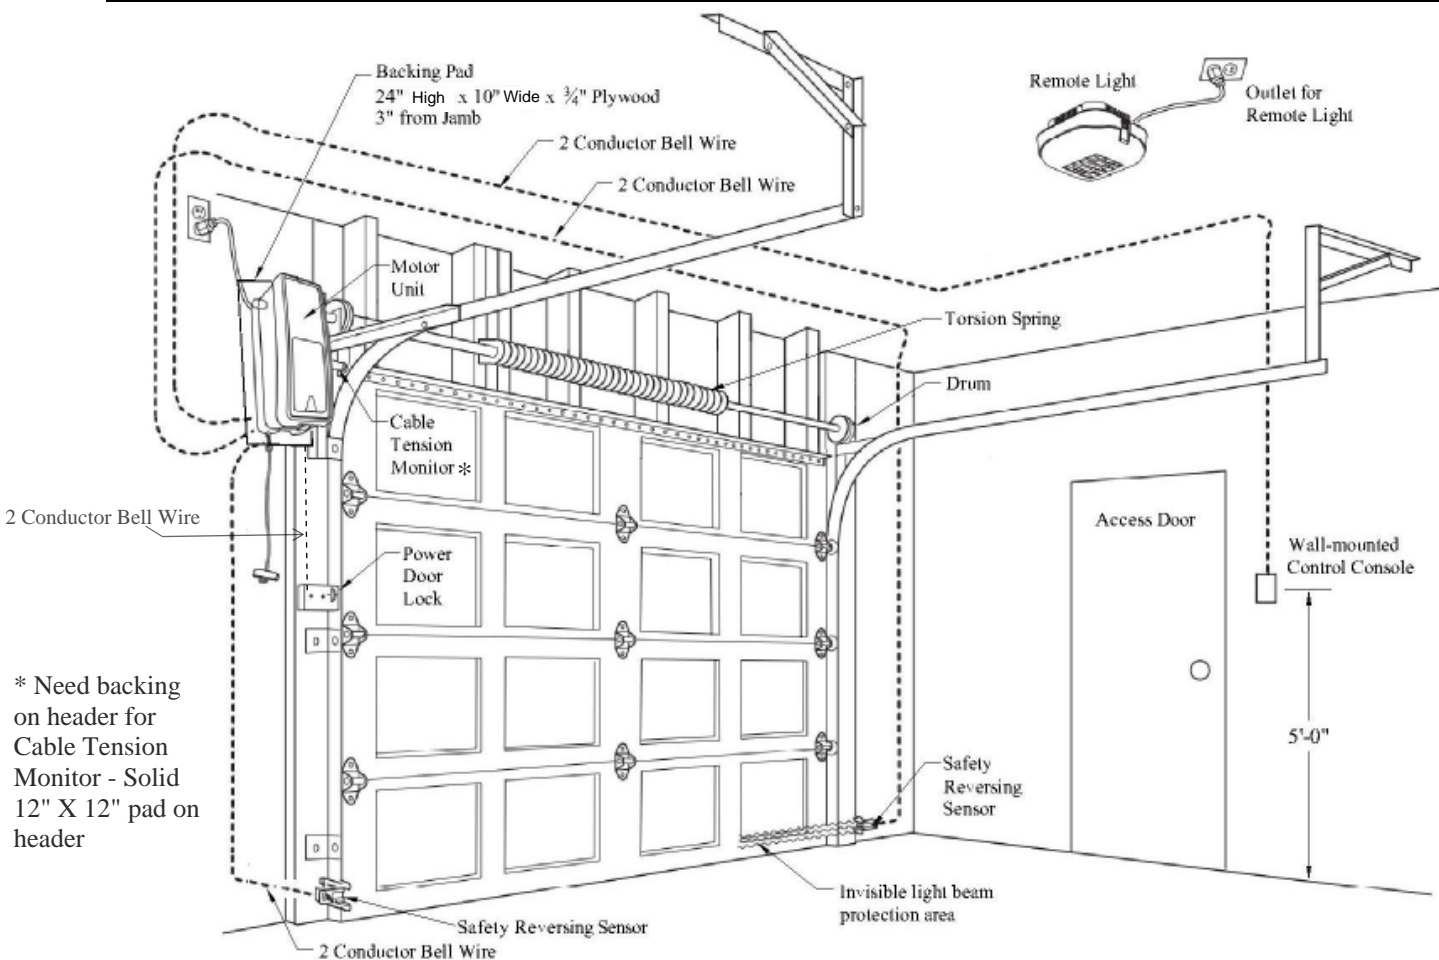

### Procedure

1. Electrical outlet should be installed within 3 feet of backing for the operator head, but not within the backing area.
2. An additional electrical outlet should be installed within the garage area, where the remote light is to be mounted. (If remote light is not to be mounted next to the operator head.)
3. Run 2 conductor bell wire from the operator head to the wall control panel and power door lock.
4. Run 2 conductor bell wire from each sensor (6 inches from floor) back to the outlet for the operator head.
  - There should be a total of 6 wires available at the operator head.
  - The wire should extend a minimum of 4 feet from the wall and 2 feet from the sensor and wall control panel locations.

### **PLEASE NOTE:**

Optional accessories are available for the 3800LM:

- Model 475LM – Battery backup unit – in case of power outage – limited cycles
- Model 580LM – Alternate power system - in case an outlet cannot be installed within 3 feet of the operator head
- Model 480LM – Alternate mounting kit – for low headroom or obstructed area applications
- Model 380LM – Additional remote light kits – if more lighting is required (additional outlets may be needed)