


O & E Low Headroom Bracket

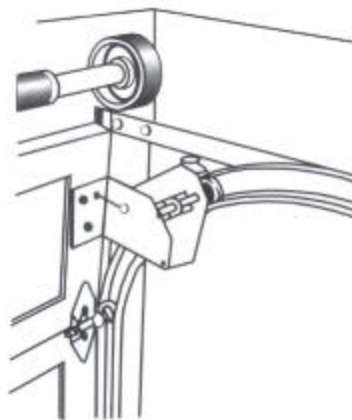

- Can be used on doors, up to 8' high, with torsion or extension springs, but when used with extension springs, there must be a minimum of 7" of "headroom".
- Door won't go higher than top of spring shaft when opened.
- Modifications to the vertical track are necessary.
- Can be either used with the initial installation of the door, or easily added to an existing door, when needed to create "headroom" for the addition of an opener.
- Residential applications only.
- Installation instructions included.