

HARBOUR DOOR


III HARBOUR GATE | 25 YEARS OF SERIOUS SERVICE

P 250.383.1606 F 250.383.2491 E harbourdoor@shaw.ca
210 Mary Street, Victoria, BC, V9A3V9

harbourdoor.com

Pre-Wiring Procedure for Trolley Residential Garage Door Openers

All low voltage wiring should be installed by an electrical contractor to avoid unsightly surface wiring.

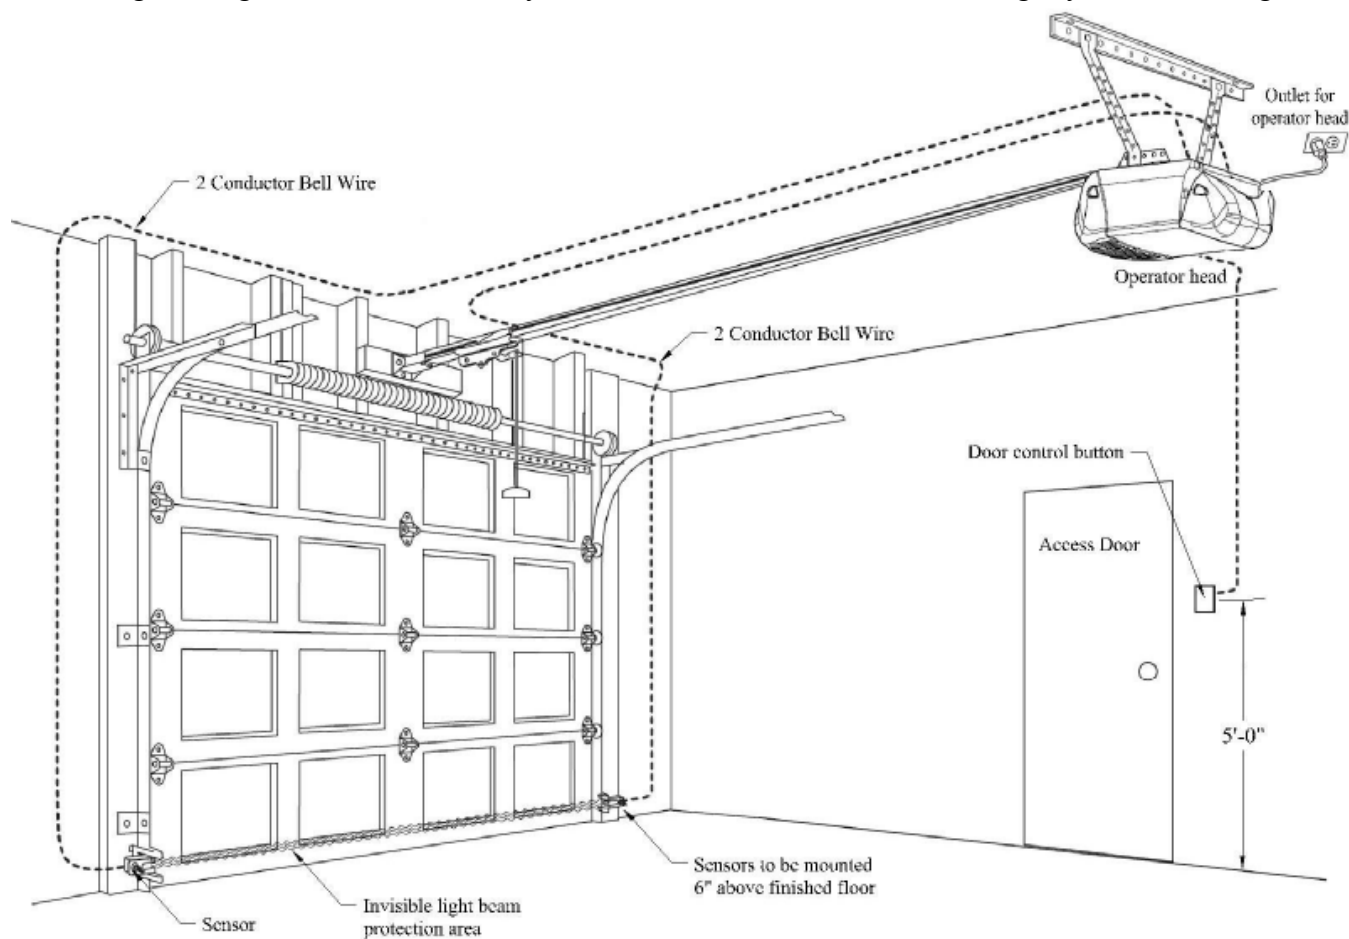

Procedure

1. Run 2 conductor bell wire from operator head (electrical outlet in ceiling) to wall control panel.
 2. Run 2 conductor bell wire from each sensor (6 inches from floor) back to outlet in ceiling.
- There should be a total of 6 wires available at the ceiling.
 - The wire should extend a minimum of 4 feet from the ceiling and 2 feet from the sensor and door control button locations.
 - Electrical outlet should be installed approximately 12 feet back from opening and 1 foot off center.